

GLE 63 M157 Cold Air Intake System Gen-2

SKU: BBCAIS008-2Gen



Thank you for purchasing the Mercedes AMG GLE63 M157 Gen 2 Cold Air Intake

This Installation guide provides the instructions on how to install the Blackboost Cold Air Intake and the tools required.

Caution: Make sure the engine bay is cooled down.

Tools Required



1. Hex 7mm, 8mm nut drivers
2. Flat head screw driver
3. Hose Clamp Plier

PPE




1. Gloves
2. Safety Glasses

OEM Intake Box Removal

Step 1

Remove the engine cover and the plastic panels as shown below.

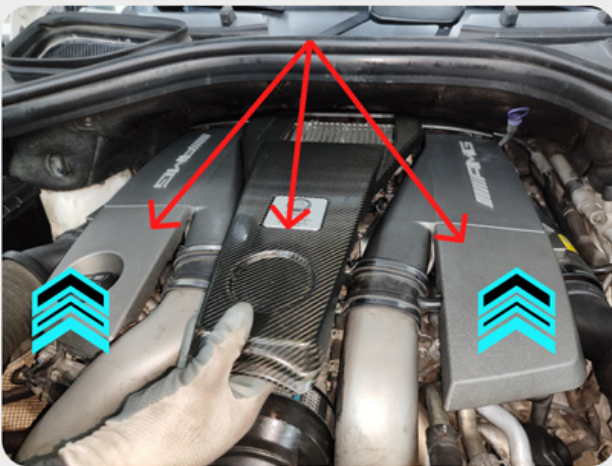


Step 2

Remove both the OEM inlet ducts as shown below



Step 3

Unplug the sensor cables as shown below

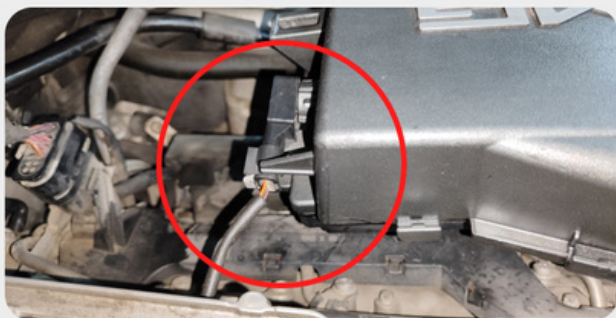


Step 4

And then loosen the clamps as shown below in order to remove the Airboxes.




Step 5

Pull out and remove the OEM Airboxes as shown below.

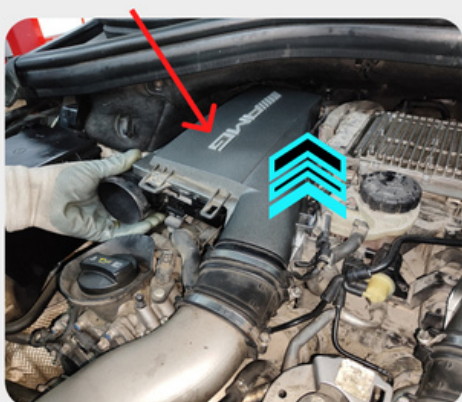


Step 6

Loosen other clamp and remove the OEM couplers.

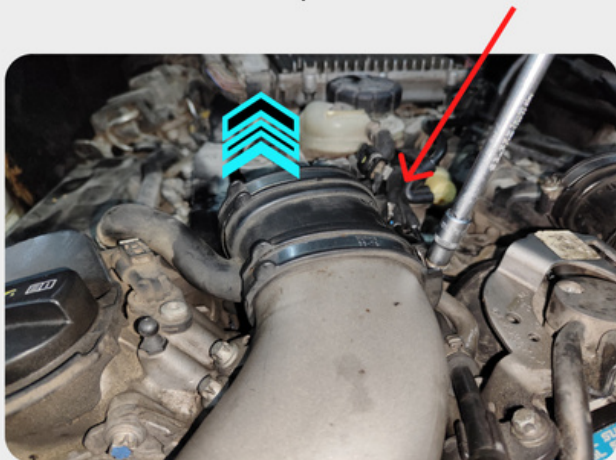

Step 7

Loosen both the nuts and remove the OEM breather line as shown below to connect the BlackBoost breather line connector.

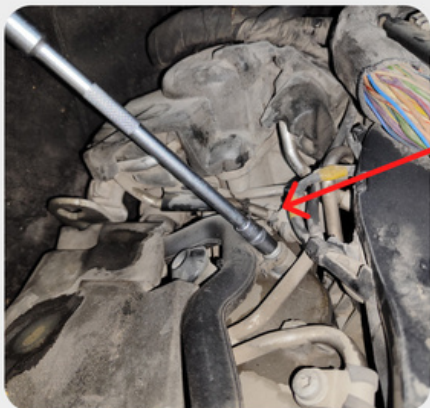

Step 8

Disconnect the OEM coupler's connector from the breather line as show below.



BlackBoost Cold Air Intake Installation



Blackboost Cold Air Intake Installation

Step 1

Install the OEM breather line as shown below.



Step 2

Connect the BlackBoost coupler as shown below to the OEM breather line as shown below.



Step 3

Hand tighten the clamps as shown below.



Step 4

Connect the BlackBoost extension cable to the OEM sensor cable.




Step 5

Insert both the sensor into the BlackBoost Airbox as shown below.



Step 6

Place the BlackBoost Airboxes as shown below.

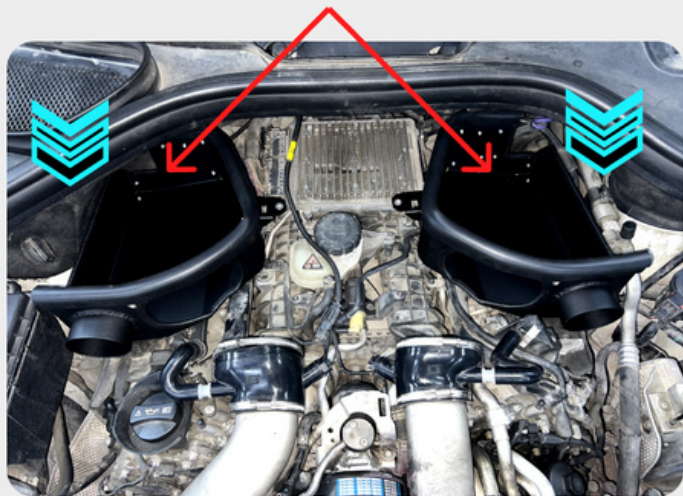

Step 7

Place the BlackBoost pipe with the filter as shown below and insert the pipe to the couplers.



Step 8

Hand tighten BlackBoost filters.

(Only hand tighten it and make extra care to make sure you don't over tighten it)



Step 9

Hand tighten couplers as shown below

(Only hand tighten it and make extra care to make sure you don't over tighten it)





Step 10

Connect the OEM Inlet duct back to the BlackBoost Airboxes.



Step 11

Place the BlackBoost engine cover and tighten the thumb screws as shown below.

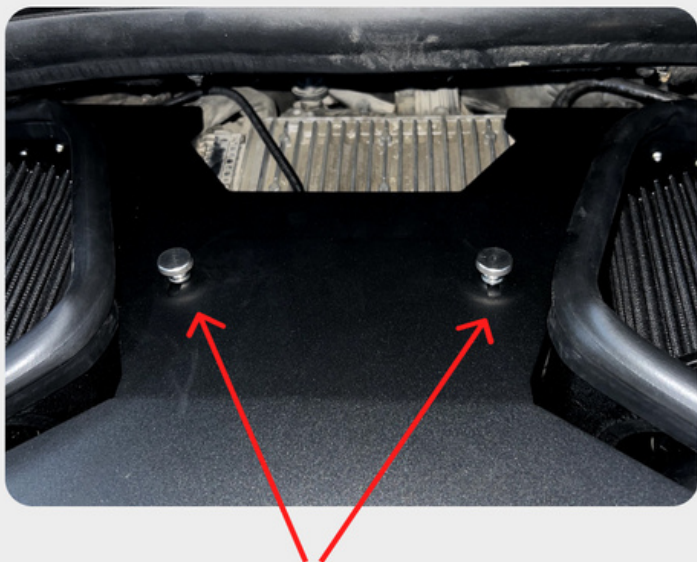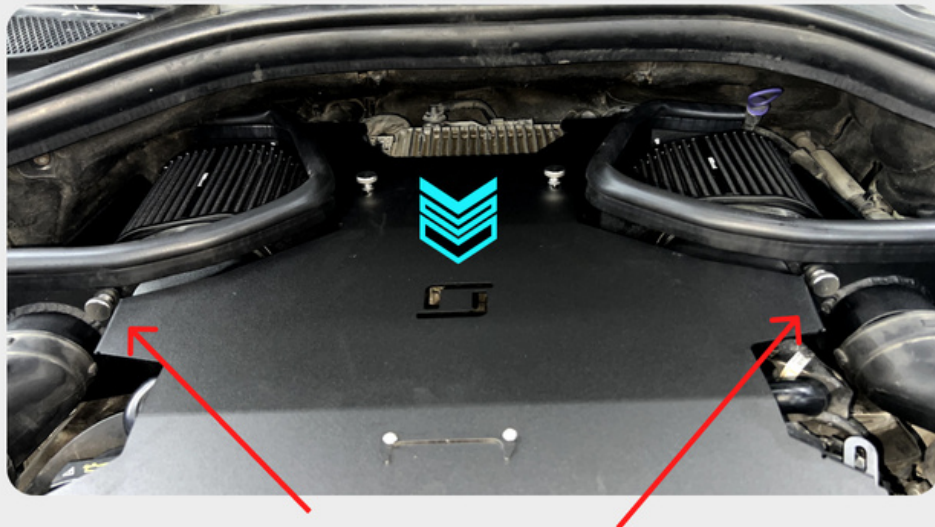

Step 12

Attach the BlackBoost logo plate and the Engine builder plate.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.